


# the Bach Coat Hook

---

## mounting instructions

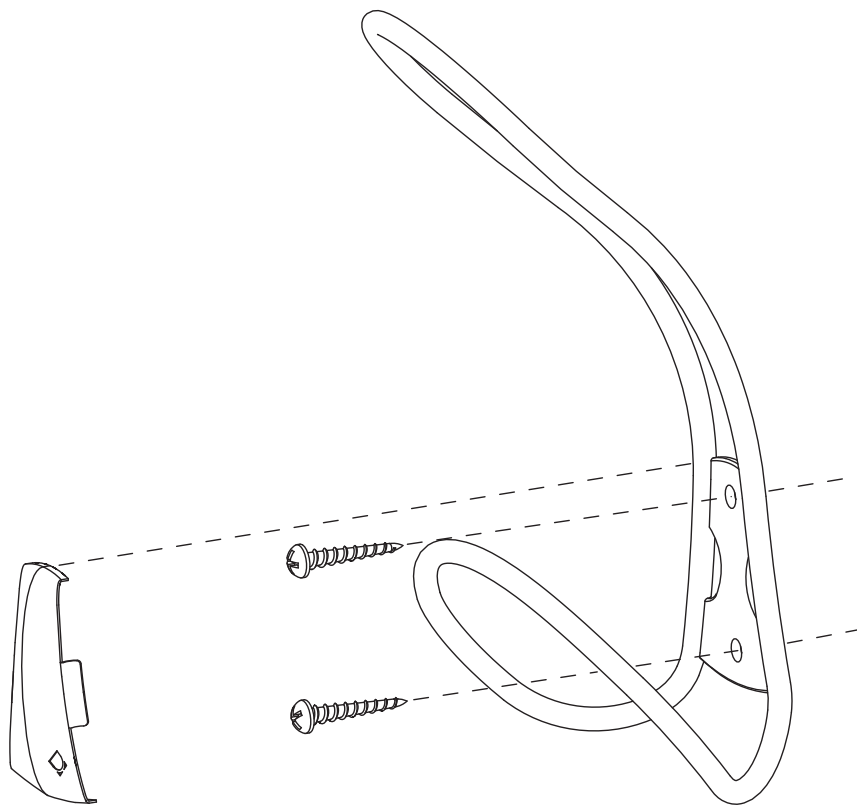

### **Mounting Instruction:**

Locate and screw directly into wooden stud in drywall, or in case of solid wall (concrete, tile or brick), drill and insert correct rawl fastener before securing screws. If in doubt, consult your local hardware store for appropriate fixing advice.

Max Weight: 12Kgs, 26lbs